
DRAWING FOR INSTALLATION INSTRUCTION OF EL-380A

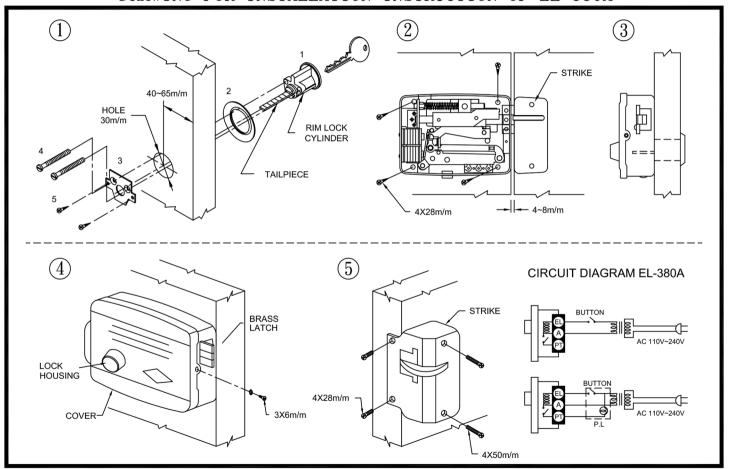

YU'S ELECTRIC CO., LTD.

INSTALLATION INSTRUCTION

EL-380A Electric Lock

- I. Installation of Rim Lock Cylinder:
 - a. Bore 30mm Dia. hole at recommended height: 36" to 38" from bottom of door. Hole center to door edge to be 40~65mm.
 - b. Install the Lock Cylinder in order of 1,2,3,4,5 on Drawing (1).
- II. Installation of Lock Housing:(See Drawing 2)
 - a. Open the cover of Lock Housing by loosing the screw on Drawing 4.
 - b. Place Lock Housing on door. guiding Tailpiece into rectangular hole on back of Lock Housing.
 - c. Place Strike on Jamb to fit Bass Latch. Position both Strike and Lock Housing to make a clearance of 4~8mm in between.
 - d. Put down Strike. Tighten Lock Housing with four 4x28mm wood screws. (If on metal door, must use self-tapping screw)
- III. Installation of Strike:

Re-position Strike according to II.c. Tighten Strike with screws as Drawing ⑤. (If on metal Jamb, must use self-tapping screw)

- IV. See Drawing ③ for position of Lock Housing and Rim Lock Cylinder.
- V. Connect wires according to circuit diagram.
- VI. Re-cover Lock Housing and fix with screw as Drawing 4 .

